



CAN COLLECT

DIRT, DUST & SMALL DEBRIS (DRY USE ONLY)

CAN'T COLLECT

ANYTHING WET, HAZARDOUS OR THAT WILL GET WRAPPED AROUND THE BRUSH (STRING, BANDING, SHRINKWRAP ETC.)

HOW IT WORKS

THE MAIN ROLLER BRUSH CONCEALED UNDERNEATH THE MACHINE REMOVES THE DIRT FROM THE FLOOR



FRONT BRUSH(ES)

**ARE FOR EDGE CLEANING ONLY
HAVE THESE OFF THE FLOOR THE REST OF
THE TIME**



WHERE DOES THE DIRT GO?

IN THE REAR BIN – REMOVE TO EMPTY

WHAT ABOUT THE FILTER GETTING BLOCKED?

**TO CLEAR THE FILTER AUTOMATICALLY
PRESS THE BUTTON REGULARLY (EVERY 10-15 MINS)**

PRESS IT AGAIN BEFORE EMPTYING THE BIN

HOW LONG WILL IT RUN FOR?

WITH NEW BATTERIES = 4 HOURS +

WHEN DO I CHARGE IT?

ONLY WHEN IT HAS RUN OUT OF CHARGE

HOW LONG WILL IT TAKE TO CHARGE?

8-12 HOURS (DEPENDING ON SPEC)



PERFORMANCE MAYBE AFFECTED AFTER AROUND 700-1000 CYCLES (DEPENDING ON SPEC) EXAMPLES (APPROX):

CHARGE TWICE A DAY = 730 CYCLES PER YEAR = 1 YR

CHARGE ONCE A DAY = 365 CYCLES PER YEAR = 2 YRS

CHARGE EVERY 3 DAYS = 122 CYCLES PER YEAR = 6 YRS



- This notice serves as a quick guide to important points to remember
- The machine should be used by authorised trained operators only
- All operators must read & understand the operator manual prior to use



SCAN ME

BEFORE USE

- Check charger is showing fully charged green light (if on charge)
- Check brushes
- Check rubber flaps
- Check filter
- Check container(s) are empty

OPERATION

- Sit on seat
- Switch on using key
- Check safety switch is in correct position
- Check parking brake is off
- Ensure green light is on
- Lower brush onto floor – switch on brush
- Switch drive button to forward
- Turn handlebar anti-clockwise (left hand down) to drive forward
- Decrease speed when turning
- Switch drive button to reverse
- Turn handlebar clockwise (right hand down) to reverse
- Decrease speed when turning
- Switch side brush(es) off, these should be used for cleaning edges only
- Go slow for most effective sweeping of edges
- Raise flap using lever to collect light, bulky debris
- In case of emergency pull the emergency brake to stop the machine
- Operate filter shaker regularly (every 5 minutes if particularly dusty)
- **You should NOT see dust when using this sweeper** – if you can see dust, something needs attention e.g. check the side brush is up / the filter is clean / the bin is empty

AFTER USE

- Switch off brush switch, lift brush lever
- **Empty containers**
- Check brushes
- Check rubber flaps
- Check filter
- Wipe machine down with damp cloth
- **Charge (if flat)**
Top up batteries once a week (wet only)

DO NOT

- **DO NOT** collect string, banding, shrink-wrap or similar this will cause serious damage to the machine
- **DO NOT** opportune charge (e.g. at tea breaks etc, only charge when the machine is flat)

CALL 0141 647 4200 FOR ASSISTANCE